

Atop Technologies, Inc.

Industrial Ethernet to Fiber Media Convertor

EF23 Series

10/100 Base-TX to 100Base-Fx Media Converters

EF23G Series

1000Base-TX to 1000Base-FX Media Converters

Hardware Installation Guide

Version 1.1 Updated on Dec, 2011



Tel: 886-3-5508137 Fax: 886-3-5508131 www.atop.com.tw

Introduction

Thank you for choosing the Atop Industrial DIN-Rail Ethernet to Fiber Media Converter. The EF23/EF23G Series provide industrial grade media conversion between 10/100Base-TX and 100Base-FX (SC connectors)/1000base-T(X) and 1000Base-FX(SC connectors/SFP).

EF23 Series

■ EF23-1-Fm-SC-2:

This Guide covers Five product models:

Fast Ethernet 10/100Base-TX to 100Base-FX Media Converter with extended operating temperature.

Include 1 10/100M RJ45 and 1 100M Multi-mode Optical Fiber.

■ EF23-1-Fs-SC-30:

Fast Ethernet 10/100Base-TX to 100Base-FX Media Converter with extended operating temperature.

Include 1 10/100M RJ45 and 1 100M Single-mode Optical Fiber.

EF23G Series

■ EF23-1G-1Fm-SC-500M:

Gigabit Ethernet 1000Base-TX to 1000Base-FX Media Converter with extended operating temperature.

Include 1 1000M RJ45 and 1 1000M Multi-mode Optical Fiber.

■ EF23-1G-1Fs-SC-10:

Gigabit Ethernet 1000Base-TX to 1000Base-FX Media Converter with extended operating temperature.

Include 1 1000M RJ45 and 1 1000M Single-mode Optical Fiber.

■ EF23-1G-1SFP:

Gigabit Ethernet 1000Base-TX to 1000Base-SX/LX/LHX Media Converter with extended operating temperature.

Include 1 1000M RJ45 and 1 1000M SFP slot.



Never install or work on electrical or cabling during periods of lighting activity. Never connect or disconnect power when hazardous gases are present.



WARNING:

Disconnect the power and allow to cool 5 minutes before touching.



Caution:

CLASS 1 LASER PRODUCT. Do not stare into the laser!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received; including interference that may cause undesired operation.

Inside the Package

■ Main Product

■ Atop EF23/EF23G industrial Ethernet Media Converter x1

Standard accessories

■ 3-pin Terminal Block (2ESDVM-03P) x1

Atop P/N: 50706701G

RJ-45 Port Plugs x1

Atop P/N: 3990012G

lacktriangle Hardware Installation Guide (Warranty card is include) x1

Atop P/N: 89900403G

Optional Accessories

■ 3-pin Terminal Block(2ESDVM-03P)

Atop P/N: 50706701G

■ Adapter: 3-pin Terminal block (5.08 mm) power adaptor, 100-240VAC input, 1.25A @ 12VDC output, US

plug


Atop P/N: 7010000000027G

 Adapter: 3-pin Terminal block (5.08 mm) power adaptor, 100-240VAC input, 1.25A @ 12VDC output, EU

plug

Atop P/N: 7010000000028G

Product Description

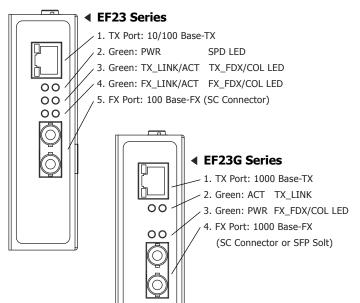

Hardware Installation

■ Electrical

Step 1: Unpack the Media Converter, check to make sure no external damages.

Step 2: Connect the power jack with the power adapter. It is normal to see the PWR indicator on.

Step 3: Hook up one RJ-45 port to your LAN, and other port to your computer. Check to mark sure your host computer can access the LAN.

Step 4: Hook up one FIBER port to other EF23 series, It is normal to see the FX_LINK/ACT indicator on.

Mechanical


Media Converters are equipped with DIN-Rail bracket attached onto rear panel. Follow the steps below to fasten the Media Converter to DIN-Rail.


Step 1: Tilt the unit slightly backwards.

Step 2: Fit the unit over top the DIN-Rail.

Step 3: Push downwards and against the DIN-Rail for locking.

Step 4: Check that the unit is locked into position.

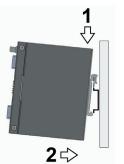

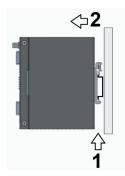

5 50 ·

EF23 Series LED Indicators

LED	ON	OFF	Flash
PWR	ON	OFF	
SPD	100M	10M	
TX_LINK\ACT	Link up	Link down	Link up/Active
TX_FDX/COL	Full	Half	Half/Col happen
FX_LINK\ACT	Link up	Link down	Link up/Active
FX_FDX/COL	Full	Half	Half/Col happen

^{*} SPD only for TX

EF23G Series LED Indicators

.ED	ON	OFF	Flash
ACT			Transmitting or Receiving
X_LINK\ACT	Link up	Link down	
PWR	ON	OFF	PWR
X_LINK\ACT	Link up	Link down	Link up/Active

Pin Assignment of Network Connections

10/100 Base-1X Ethernet Port Connection								
RJ-45								
10/100/1000 Base -TX								
Pin	1	2	3	4	5	6	7	8
Signal	Tx+	Тх-	Rx+	NC1+	NC1-	Rx-	NC2+	NC2-


Cable type, Max. Transmission and Connection

cable type, riaxi transmission and connection						
Speed	Cable	Max. Length	Connector			
10 Base-T	Cat. 3,4,5	UTP 100m (328 ft)	RJ-45			
100 Base-T	Cat. 5 UTP	UTP 100m (328 ft)	RJ-45			
1000 Base-T	Cat. 5/Cat.5e UTP	UTP 100m (328 ft)	RJ-45			
100 Base-F	850nm,1310nm, Multi-mode	2km	SC			
1000 Base-SX	850nm,1310nm, Multi-mode	500m	SC			
1000 Base-LX\LHX	1310nm,Single-mode	30km	SC			
1000 Base-SX\SX+	850nm,1310nm, Multi-mode	2km	SFP			
1000 Base-LX\LHX	1310nm,1550nm, Single-mode	30km	SFP			

100/1000Base-Fx Fiber SC Cable Wiring

	SC Connectors	ST Connectors
Fiber Port	Tx O	Tx ••• Rx •••
	Single-mode	Multi-mode

100/1000Base-Fx Fiber SC Cable Wiring

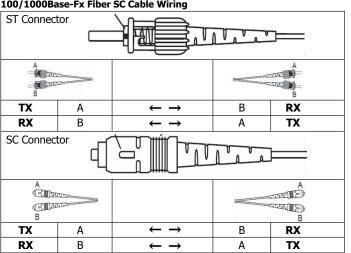

3-pin Terminal Block for power input

EF23 Series 0 0 0 0 0 0 🖶 0 0 0 0 0 0 0 0 0 0 6 5 4 3 2 65432 1. Grounding screw 1. Grounding screw

Mechanical dimensions(unit=mm)

10/100Base TX (copper)

-100Base FX (SC connector)

1000Base FX (SC or SFP slot)

- 2. LOCK
- 3. Frame Ground
- 4. V-
- 5. V+
- 6. LOCK
- 7. DIP Switch

Front view-EF23 Series

00 00

Back view


Top view-EF23 Series

88888

0 0 0 0 0 0 0

0

EF23G Series

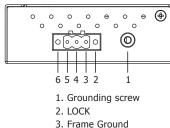

4. V-

5. V+

Front view-EF23G Series

Side view and Panel Mounting View

0

0

Redundant inputs Power Supply (6/12/24/48)-

0

0

Top view-EF23G Series

0 0 0 0 0 0 0

0

-3.30 **(**

6. LOCK

(d) Replacement with unauthorized parts

Warranty Policy

(a) Excessive forces or impacts

Warranty Conditions

circumstances:

earthquake

RMA and Shipping Costs Reimbursement

Customers shall always obtain an authorized "RMA" number from Atop before shipping the goods to be repaired to Atop. When in normal use, a sold product shall be replaced with a new one within 3 months after purchase. The shipping cost from the customer to Atop will be reimbursed by Atop.

Products supplied by Atop Technologies are covered in this warranty for

sub-standard performance or defective workmanship. The warranty is

not, however, extended to goods damaged in the following

(b) War or an Act of God: wind storm, fire, flood, electric shock,

(c) Use of unqualified power supply, connectors, or maintenance

After 3 months and still within the warranty period, it is up to Atop whether to replace the unit with a new one; normally, as long as a product is under warranty, all parts and labor are free of charge to the customers.

After the warranty period, the customer shall cover the cost for parts and labor. Three months after purchase, the shipping cost from the customer to Atop will not be reimbursed, but the shipping cost from Atop to the customer will be paid by Atop.

Limited Liability

Atop shall not be held responsible for any consequential losses from using Atop's product.

Warranty Period

Product Categories	Warranty
Ethernet Switches	
Wireless	
Serial Device Servers	5 Years
Modbus Gateways	
Embedded Device Servers	
DIN-Rail Power Supplies	3 Years
Power Adaptors	
Antennas	1 Year
Other Accessories	

The warranty certification will not be effective until an authorized stamp issued by Atop's overseas agents.

Purchase Date:	/	/	(yyyy/mm/dd)
Serial Number:			

ATOP Customer Services and Supports

- 1. Please contact your local dealers or Atop Technical Support Center at the following numbers.
 - + 886-3-550-8137 (Atop Taiwan)
 - + 86-21-6495-6232 (Atop China)
- 2. Please report the defected problems via Atop's Web site or E-mail account

Web Site: www.atop.com.tw, e-mail: service@atop.com.tw Web Site: www.atop.com.cn, e-mail: service@atop.com.cn

- Any change by website in material announcement primarily. -